

1. PRODUCT NAME**Health Design™ Coving & Corners****2. COMPANY INFORMATION**

Flexco Corporation

1401 East 6th Street

Tuscumbia, AL, USA 35674

Phone: (256) 383-7474; (800) 633-3151


Fax: (256) 381-0322; (800) 346-9075

Email: info@flexcofloors.com, technical@flexcofloors.comInternet: www.flexcofloors.com**3. PRODUCT DESCRIPTION**


ASTM F 1861, Type TP, Group 1, Style C

Thermoplastic Rubber Formulation designed to meet or exceed the above-mentioned standard specification for Resilient Wall Base.

Inside and Outside corners are available with a nominal 6" return.

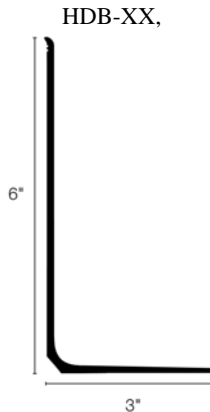

Available in 72" Lengths

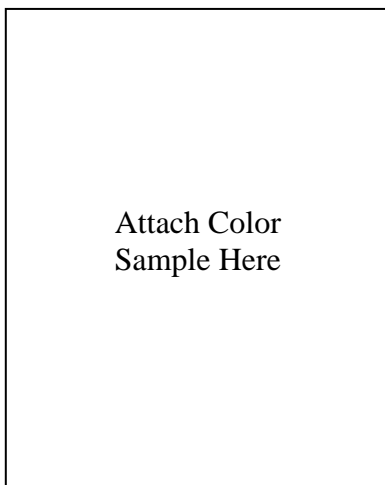Color Sample:**4. TECHNICAL DATA****ASTM E 648 (NFPA 253)** - Class 1**ASTM E 662 (NFPA 258)** - Passes**ASTM F 1861-** Meets or exceeds the requirements for heat & light aging, chemical resistance and dimensional stability**5. LEED INFORMATION**

May contribute to LEED® CI and NC credits MR 4, MR 5 and MR 6. For detailed LEED information, see

flexco.ecoscorecard.com**6. INSTALLATION**

Maintain the installation area, coving, corners, and adhesive between 65° F and 85° F for at least 48 hours before installation, during installation, and after the installation. Use only on structurally sound interior wall surfaces such as dry plaster, cured drywall, exterior grade plywood, concrete and masonry that are clean, smooth, dry and structurally sound. All surfaces must be free from moisture, alkali, old adhesive, dust dirt, wax, oil, grease, loose paint or plaster, nonporous wall coverings or paints and other extraneous coatings or materials that could prevent a successful bond. Any rough or uneven surfaces may telegraph through the wall base. Refer to Vinyl Wall Base Installation instructions for detailed information.

7. ADHESIVES**Flexco 106 Wall Base Adhesive**

- Apply with 1/8" square notch trowel, adhesive spreader or disposable nozzle
- Coverage: approximately 175 linear feet of Health Design Coving
- Contains Anti-Microbial Protection
- VOC's: < 1 g/L of material & coating

8. PRODUCT MAINTENANCE

Refer to Flexco Health Design Coving Maintenance Information for detailed instructions

9. AVAILABILITY AND COSTProducts are available through Flexco distributors. Contact Flexco Customer Service or visit www.flexcofloors.com for a list of distributors.**10. LIMITED WARRANTY**

Limited Two (2) Year Warranty

